

FD high-end pulling shoe rack installation instructions

FD high-end pulling shoe rack product parameters:
The guide rail adopts the German Heidi V6 hidden rail. The high-strength space aluminum alloy frame adopts an environmentally friendly water-based carbon spray surface treatment process, with high-end color and a scratch resistance hardness of 4H. The leather uses A-grade microfiber simulated leather, which has the advantages of odorless, wear-resistant, and waterproof.

★Finished product size:


★800 cabinets. W = 714, D = 465, H = 179

★900 cabinets. W = 814, D = 465, H = 179


★1000 cabinets. W = 914, D = 465, H = 179

★1100 cabinets. W = 1014, D = 465, H = 179


★1100 cabinets. W = 1114, D = 465, H = 179

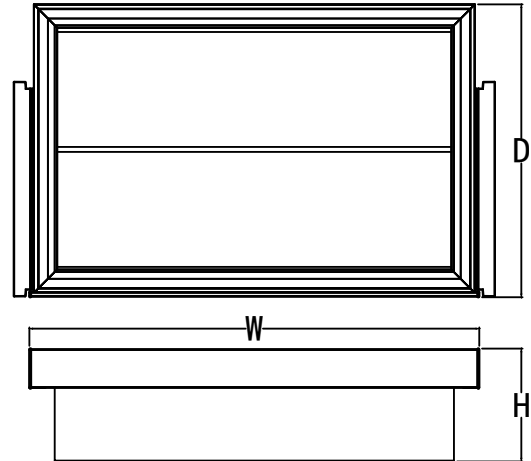

PIC1

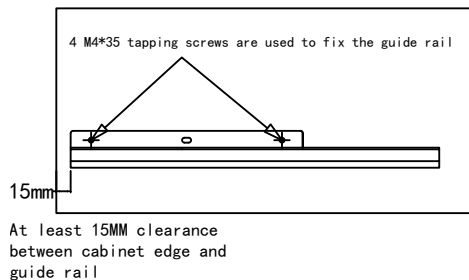

PIC2

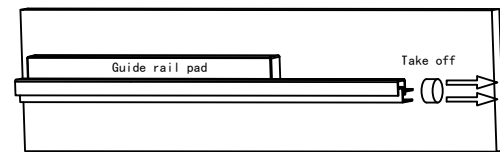

PIC3


800cabinets (870-860)

900cabinets (970-960)


1000cabinets (1070-1060)

1100cabinets (1170-1160)

1200cabinets (1270-1260)

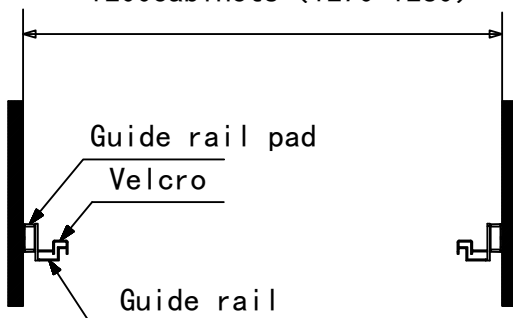

PIC4

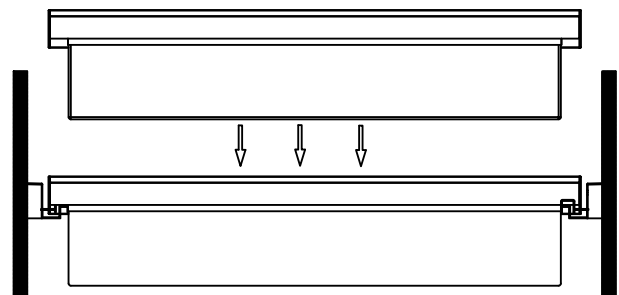

- ★ The maximum load capacity is 25KG.
- ★ Suitable for wardrobe depth of 500mm.
- ★ Suitable wardrobe width 764, 864, 964, 1064, 1164mm.

As shown in Figure 1: with M4 * 30 self-tapping screw guide rail pad and damping rail parallel to the two side plate.

As shown in Figure 2: Remove the black protective cap from the end of the slide rail.

As shown in Figure 3, check that the guideway pad and the Velcro are installed correctly.

As shown in Figure 4: Place the main body from top to bottom on the sliding rails on both sides, ensuring that the front end of the storage box is tightly attached to the front end of the sliding rail during installation.