

INSTALLATION INSTRUCTIONS

Accessory

SL	Item Description	Qty
1	Aluminum frame	1SET
2	Laminate	By PML
3	Sliding rail box	2PC
4	Self tapping screws	1SET
5	Tool kit	1SET
6	BEARING SLEEVE	1SET
7	Crystal stickers	2 sheets

Model

ITEM No	W× D× H mm	Cabinet
FD007 4 storeys	700x300x(740-890)	800
FD007 6 storeys	700x300x(1030-1180)	800
FD007 8 storeys	700x300x(1320-1470)	800
FD007 10 storeys	700x300x(1610-1760)	800
FD007 12 storeys	700x300x(1900-2050)	800
	Safe Depth Min.330mm	

Note

- 1.The product should not touch the ground during; installation, Need to cushion soft;
- 2.Avoid scratching with hard objects during the installation process;
- 3.Avoid contact with acidic or alkaline chemicals;
- 4.If the product is damaged, it should be repaired by professionals;
- 5.Do not allow children to operate the product.

Recommended tools


Comes with toolkit; Rule; Pencil; Electric drill; Cross screwdriver; Spanner.

Tips: It is recommended to have professional personnel install it. If you need to install it yourself, please read the instructions carefully before installation.


Installation Steps

- 1 Loosen the screws of the two slide rail boxes with a Phillips screwdriver, and simultaneously press the buckle switches on both sides to open the slide rail boxes

Top sliding rail box





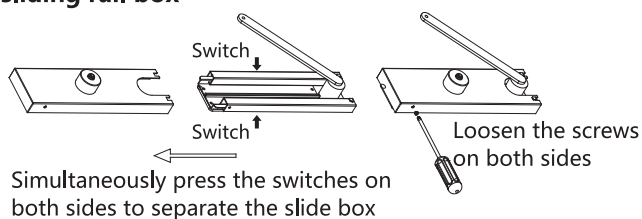


Bottom slide box

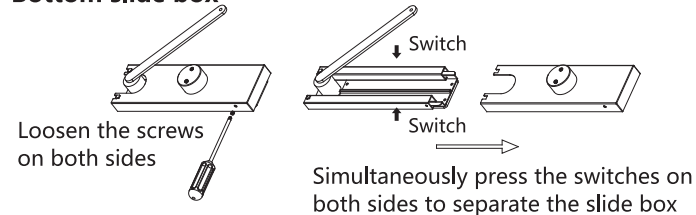


- 2 When installing the bottom box, mark a line on the bottom plate for positioning, confirm that the bottom plate is centered, and the distance between the bottom plate and the back of the door panel is 14mm. Install self tapping screws on the bottom plate, and install the top and bottom slide boxes in the same way

- 3 After installing the upper and lower base plates, reassemble the guide rail box and install the screws on both sides. Install the bearing kit to the center column of the guide rail box

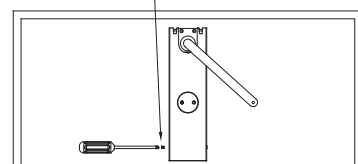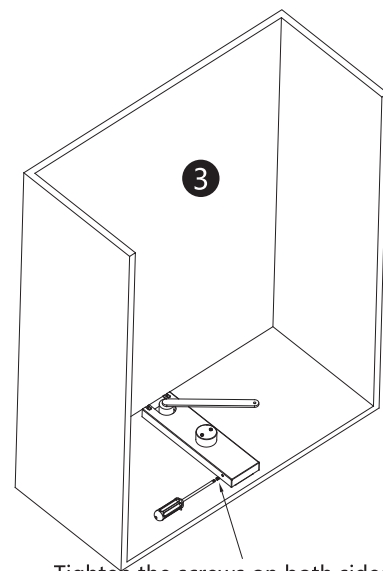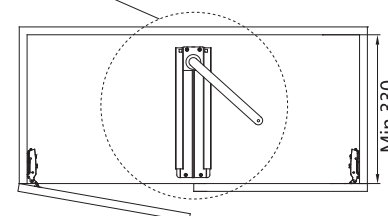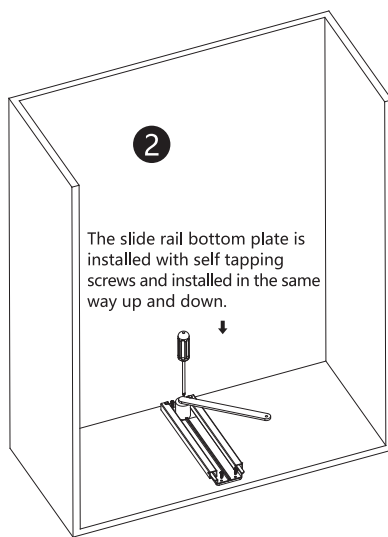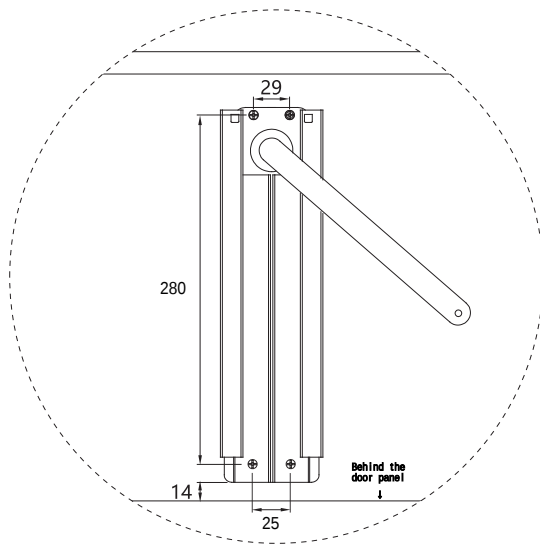


INSTALLATION INSTRUCTIONS


- 4** Install aluminum frame.
After splicing the aluminum frame, tighten it with M4 × 6 screws, paying attention to the symmetry of the holes on the upper and lower crossbeams.

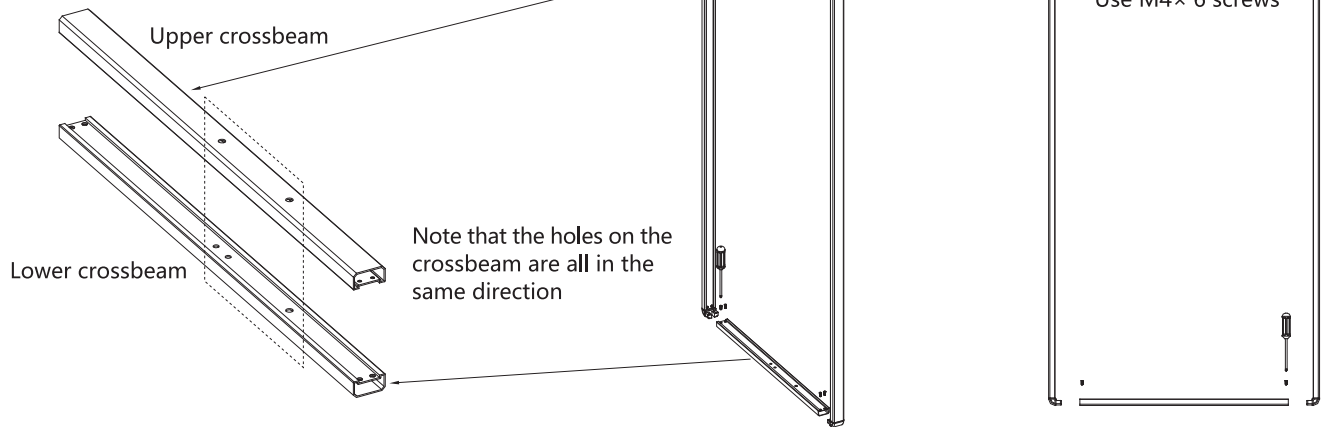


- 5** ①. Adjust the height of the aluminum frame, press it up and down against the sliding rail box, and tighten the hexagonal screws on both sides of the adjusting parts;
②. Align the screw hole in the middle of the aluminum frame with the screw hole of the top and bottom slide rail box, insert the large hexagonal socket screw and tighten it;
③. Align the swing arm screw hole with the aluminum frame screw hole, install and tighten it with socket screws;
④. Plastic pendants are installed with "L" and "R" on each layer.

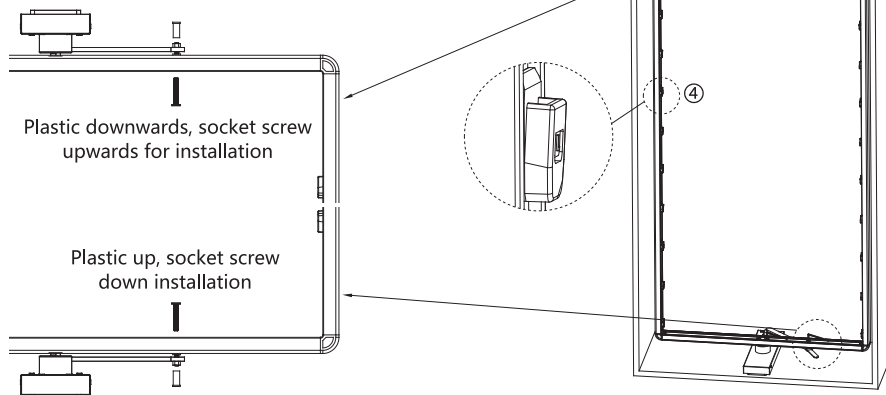

- 6** Align the shoe rack layer with the plastic pendant slot in the order and direction shown in the picture for installation

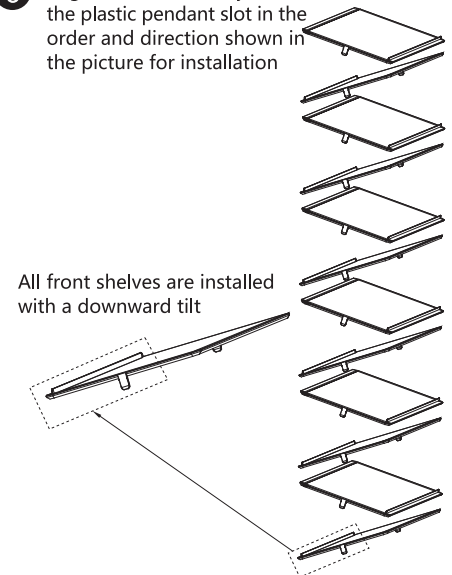

- 7** Stick the crystal stickers separately on the front and rear sides of the longitudinal rod on the side of the frame without swing arm

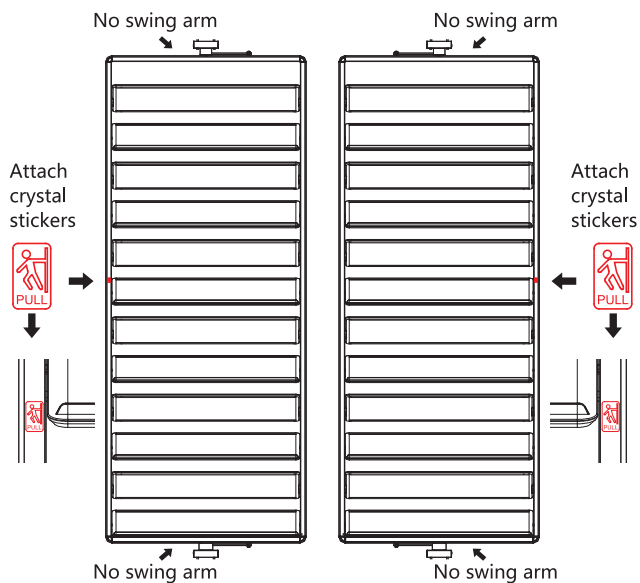

Completion effect

